 


# Winch Installation Instructions



**Dia 1**

**1.** Remove the bolt and washer on the front of the winch, as shown in Dia 1, using a screwdriver.

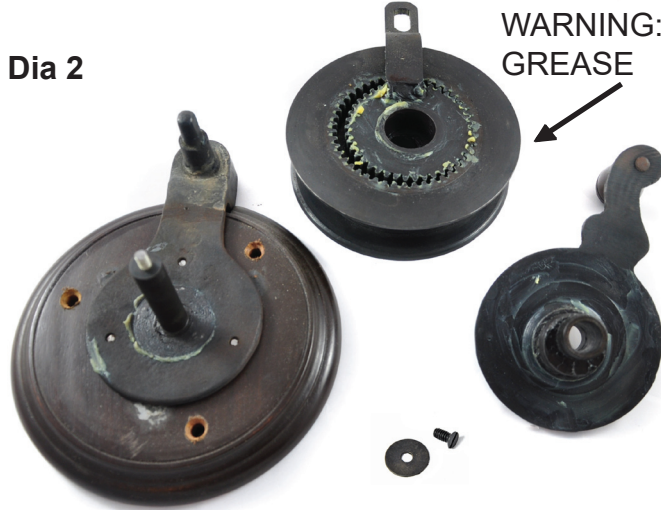

**Dia 2**

**2.** Separate the 3 parts of the winch. The winch contains a lot of grease so please be careful not to get any on your clothes. You might want to clean it off around the barrel, where the rope is going to run at this stage if you prefer. You now have access to the wooden back board.



**Dia 3**

Be Carfull not to loose the washers on the center spindle as shown above.


**3.** Screw the wooden back board into position on your wall using the screws provided and the 3 holes in the board itself. Screw it to the wall with the location arm at the bottom as shown in Dia 3.

**4.** Once the back board is screwed to the wall, thread the rope of your clothes airer through the hole located in the side of the gears outer barrel and tie a knot into the end so that the knot sits in the inside of the barrel on the back as in Dia 4. Your clothes airer may require 2 ropes to hoist it up and down so use a cut off piece of rope to thread through this hole and tie it to the 2 ropes connected to your airer

**Dia 4.** Back of gear barrel with rope fitted. The gear inside is loose and will come out. Just place it back into position if it does



 **Dia 4**

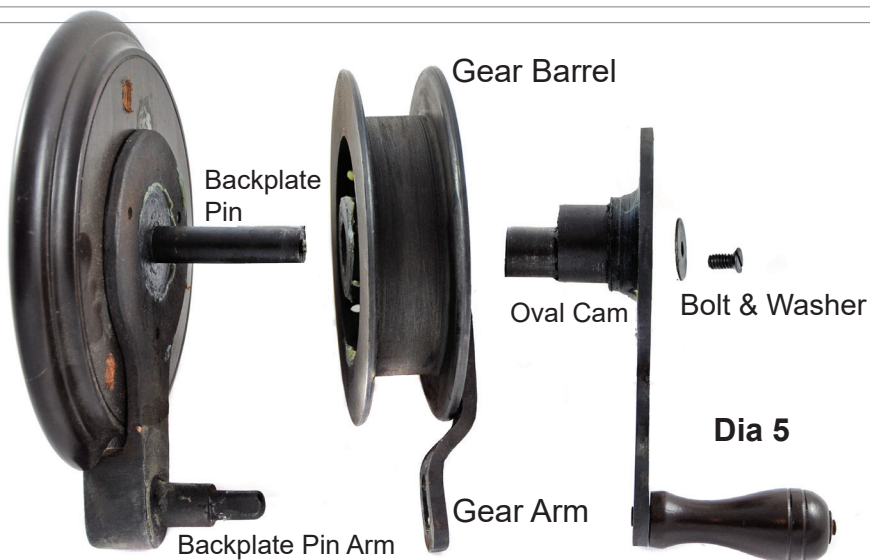

**Dia 5**

**5.** Now place the gear barrel over the pin from the back board. Reassemble the winch component parts as shown in Dia 5. The last part on the right with the winch handle

has an oval cam on it, ensure this is located correctly in the central gear system. It will lock back fully home into position. Also make sure the gear arm locates back over the back plate pin arm.

Finally fit the bolt and washer back to secure the parts together.