



HANDLING & OPERATION

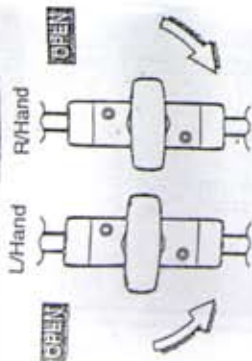

To Close

The cassette system used in this product allows it to be either left or right handed, to suit any door arrangement.


For help in deciding the correct handing for your door see diagram above, then make sure that the cassette label showing the hand you want always faces away from the door.

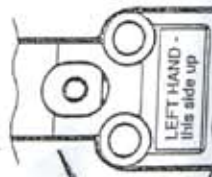


CASSETTE FIXING

Slide two guides (G) onto bottom rod (M) and fix this rod to the bottom of the cassette (K) as shown, using screw and lock-washer (B). Using this assembly, mark out the position for the cassette fixing screws (A) on the door.

It is important to check that the bottom of the rod fits the opening rather than the door - do this with the door closed in its frame. Using only the screw positions shown, fix cassette (K) to door using screws (A) - the other two holes are to take the screws for fixing the cover handle into position.

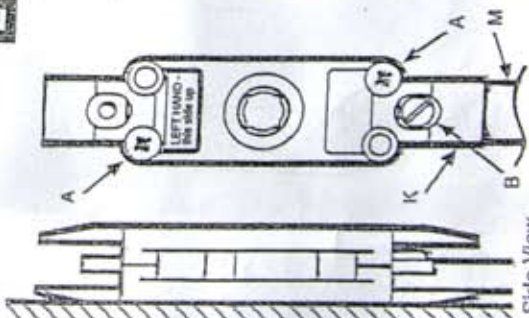

ROD & GUIDE FIXING

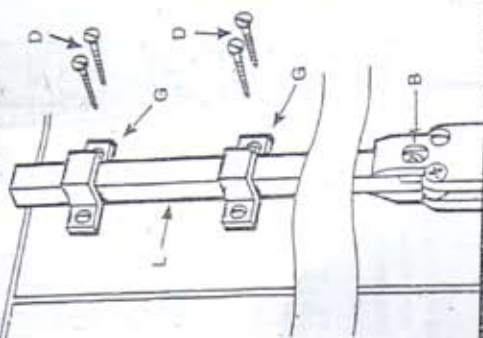


Slide two guides (G) onto top rod (L), and fix this rod to the top of the cassette (K) using screw and lock washer (B). Locate both guides as shown in diagram and fix into position using screws (D).

Take care to keep rods vertical - in order to do this it is helpful to fix end guides first.

**CASSETTE & COVER
HANDLE**

Insert spindle (E) into centre of cassette (K) before sliding cover handle (F) over it. Ensure handle is in open position (see fig 1) when fitting over cassette as shown. Ensure bolt operates smoothly, then remove cover handle (F) and tighten all screws securely.


Replace cover handle (F) and screw firmly into place using screws (C).

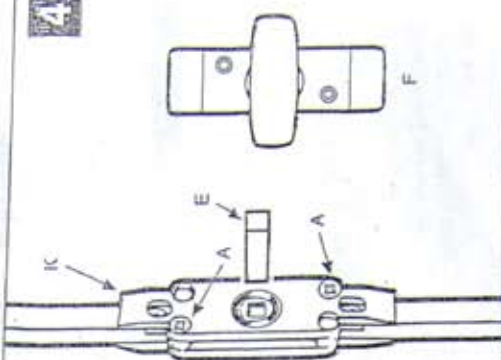


See overleaf for
DOOR FRAME FIXING DETAILS

DOOR FRAME FIXING DETAILS


Front View

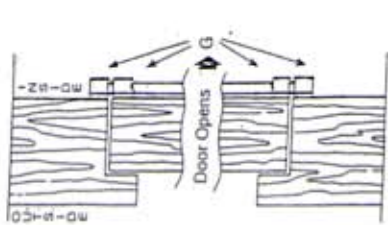


A. For this door/frame arrangement, use two guides (G) fixed to frame top and bottom.

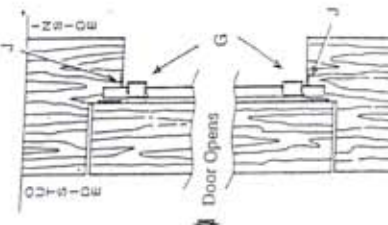

B. For this door/frame arrangement, use two angle strike plates (J) fixed to frame top and bottom.

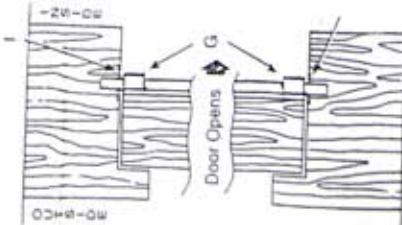

C. For this door/frame arrangement, use two flat strike plates (I) fixed to frame top and bottom

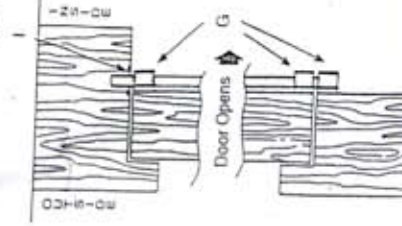




D. For this door/frame arrangement, use one guide (G) fixed to bottom frame and one flat strike plate (I) at top.


Important!
This strike is intended for use with this product. It passes up to the end of the door.

A full set of components has been included to cover for all the illustrated situations. There will be some parts left over when fitting is complete. Please dispose of these carefully.


Espagnolette Bolts Fitting Instructions

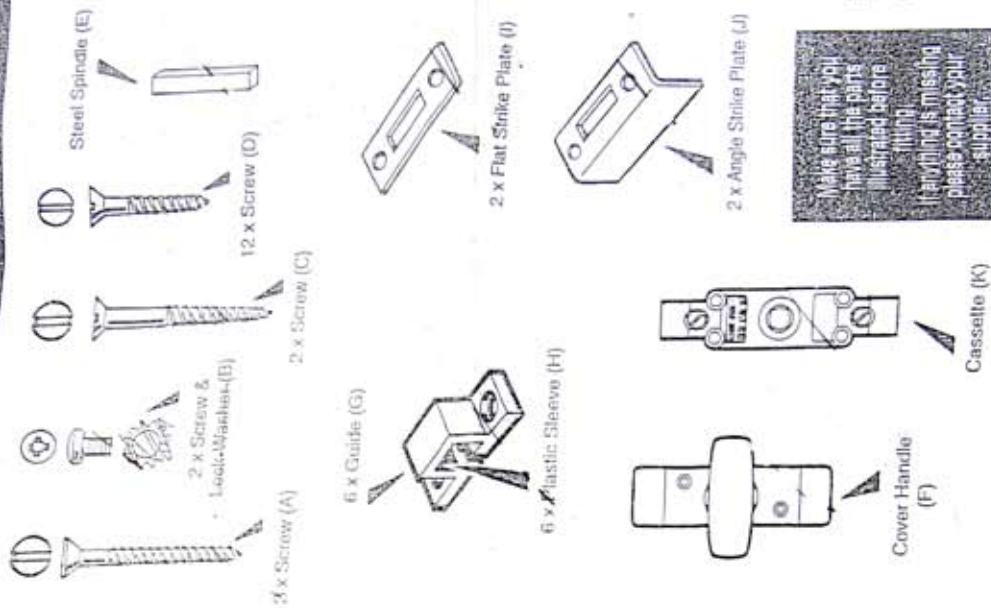


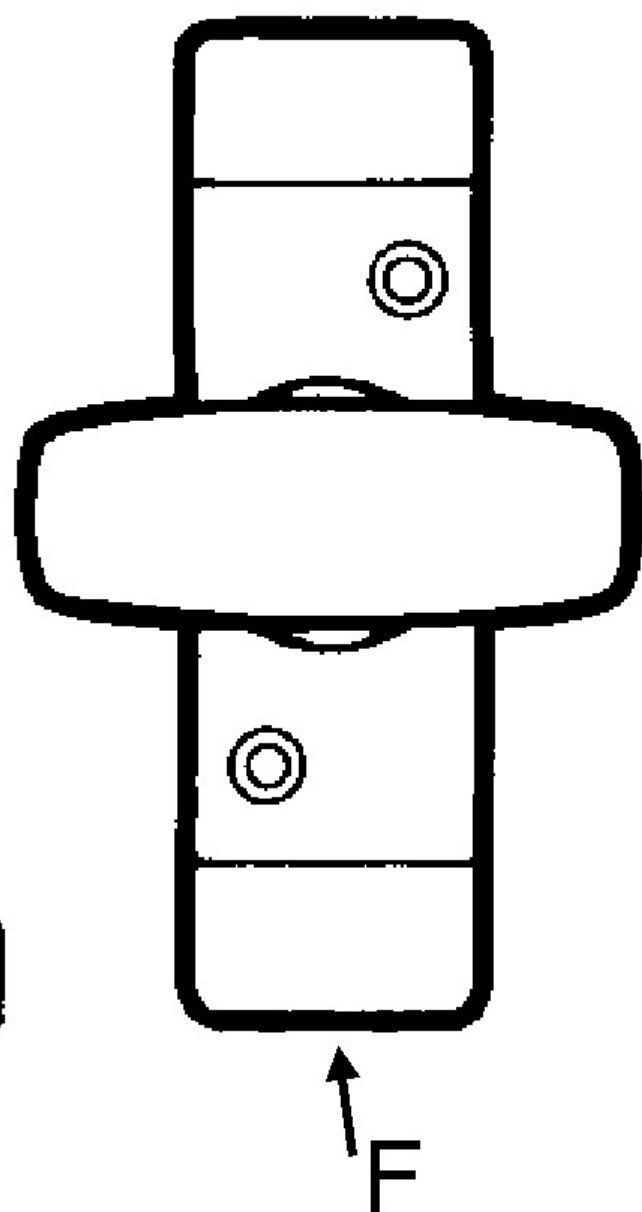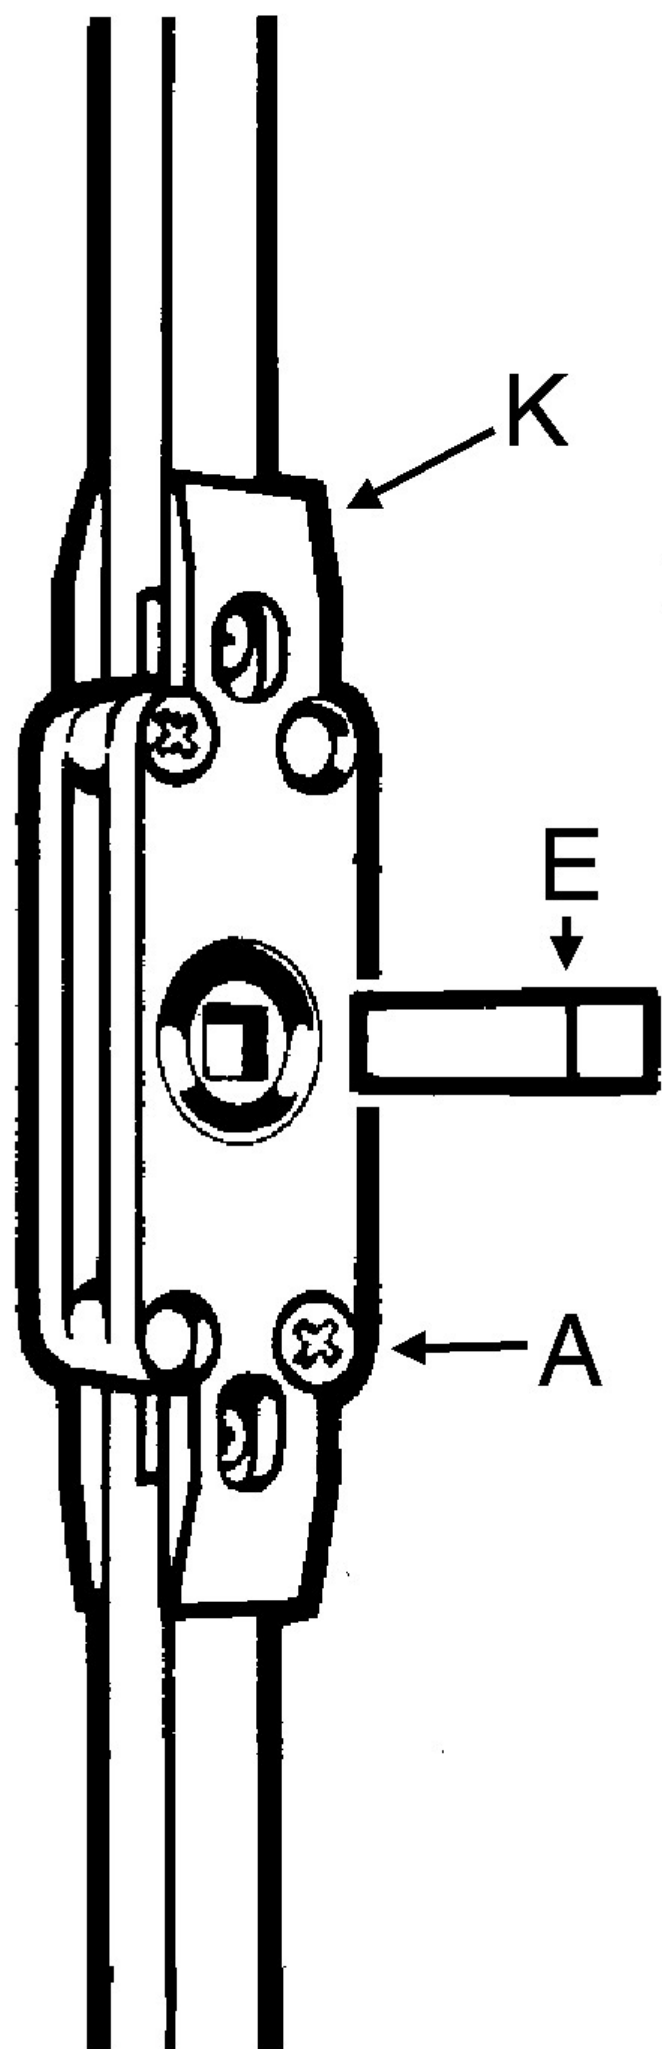

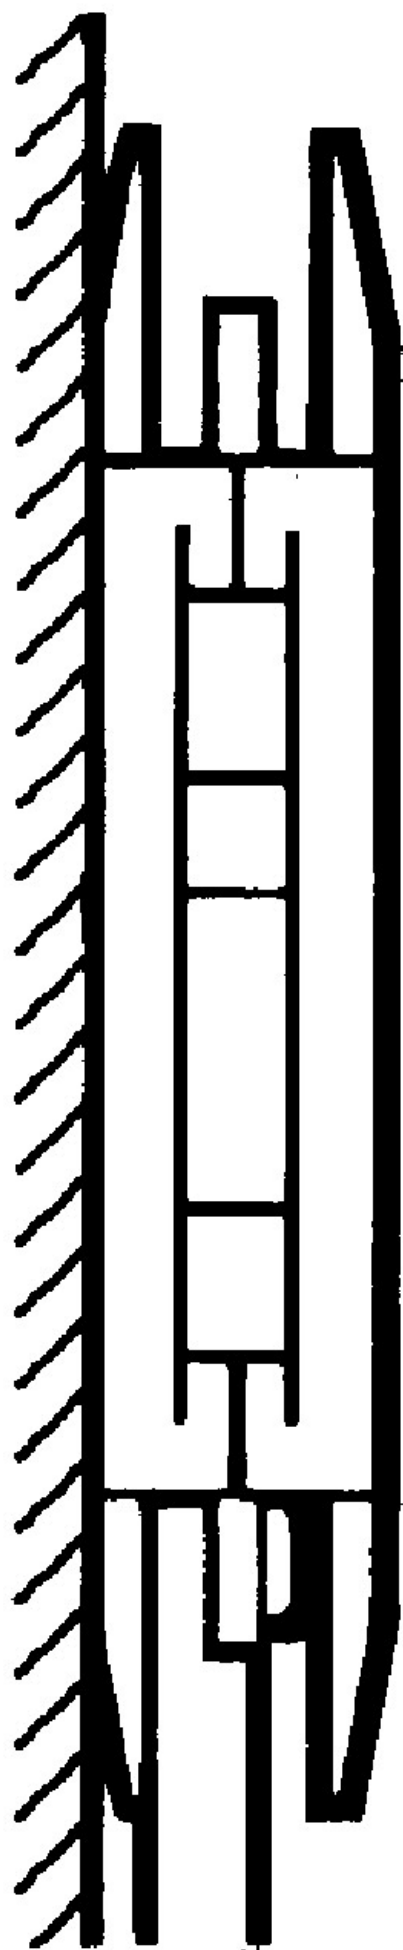


Side View

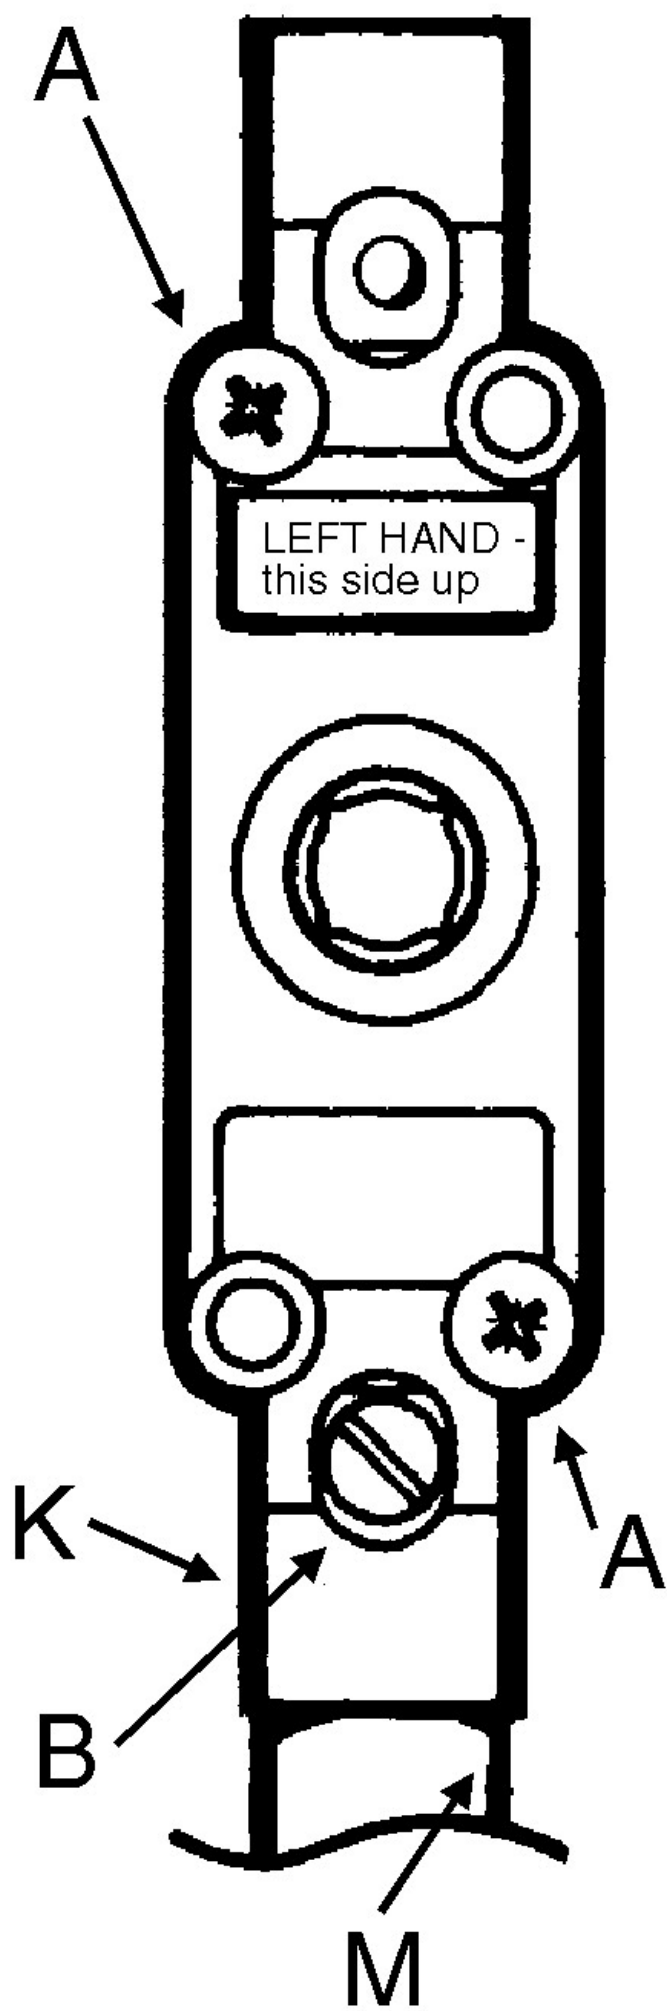

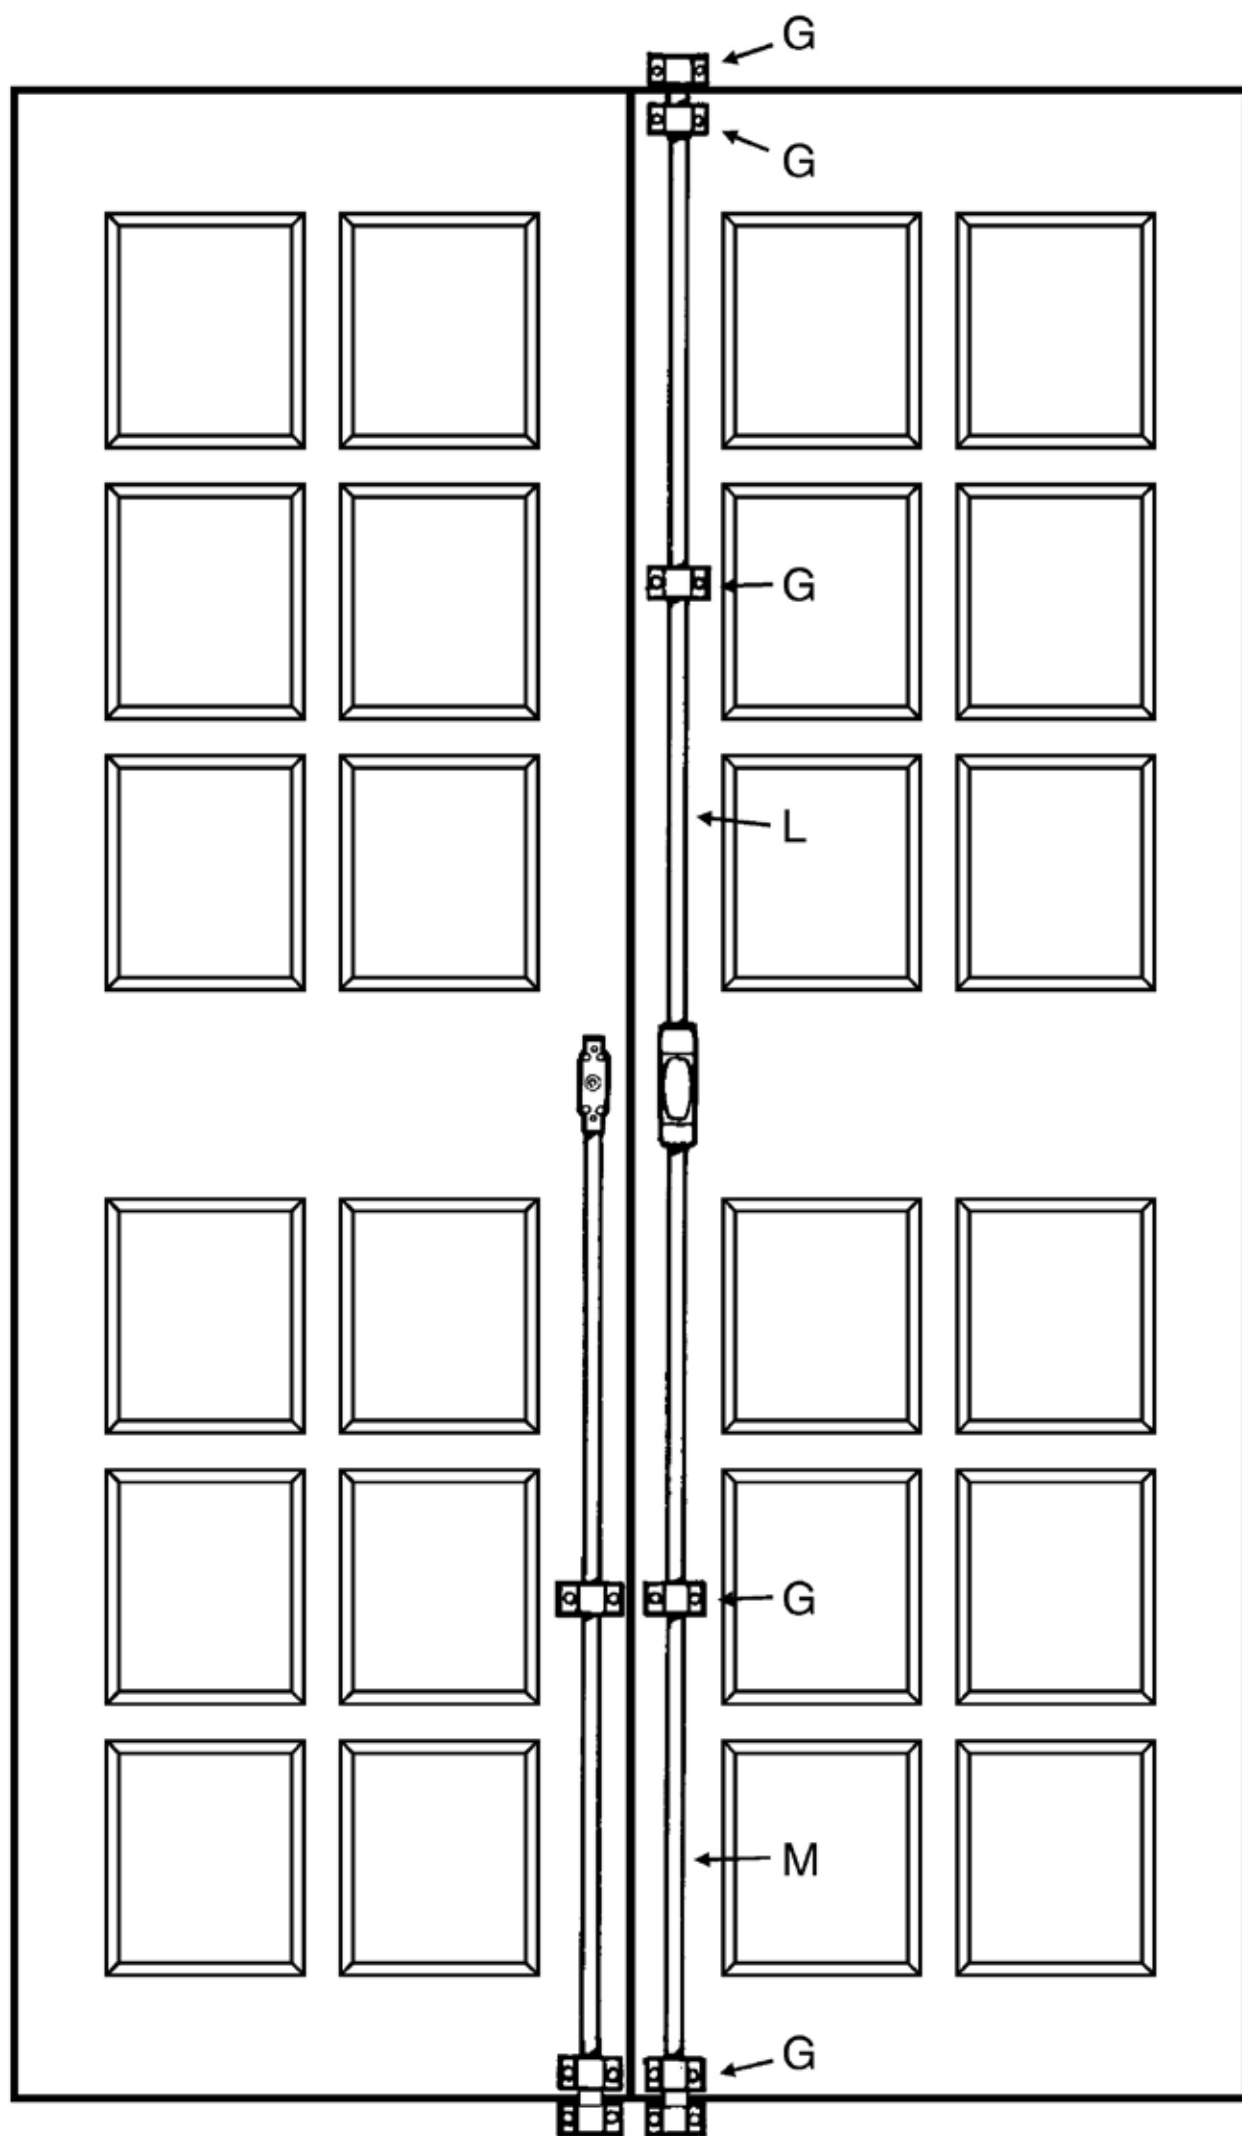

OPEN


L/Hand

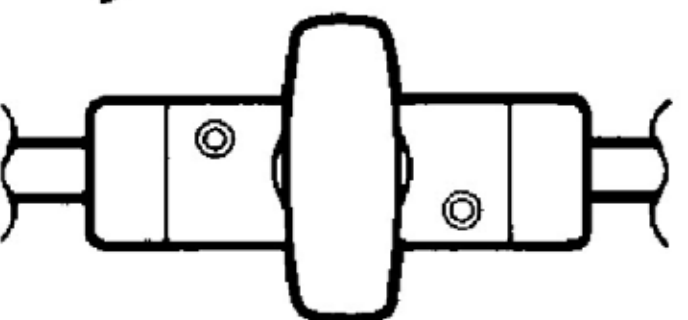

To Close

OPEN

R/Hand

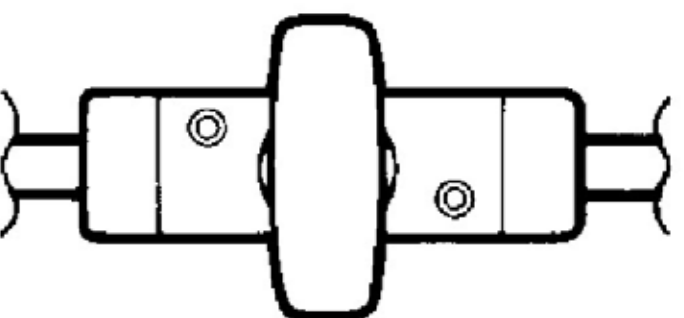

To Close

